




# Toshiba Tecra M2 RAM Replacement

This guide will show how to take out the RAM card on a Toshiba Tecra M2.

Written By: Cindy Nguyen

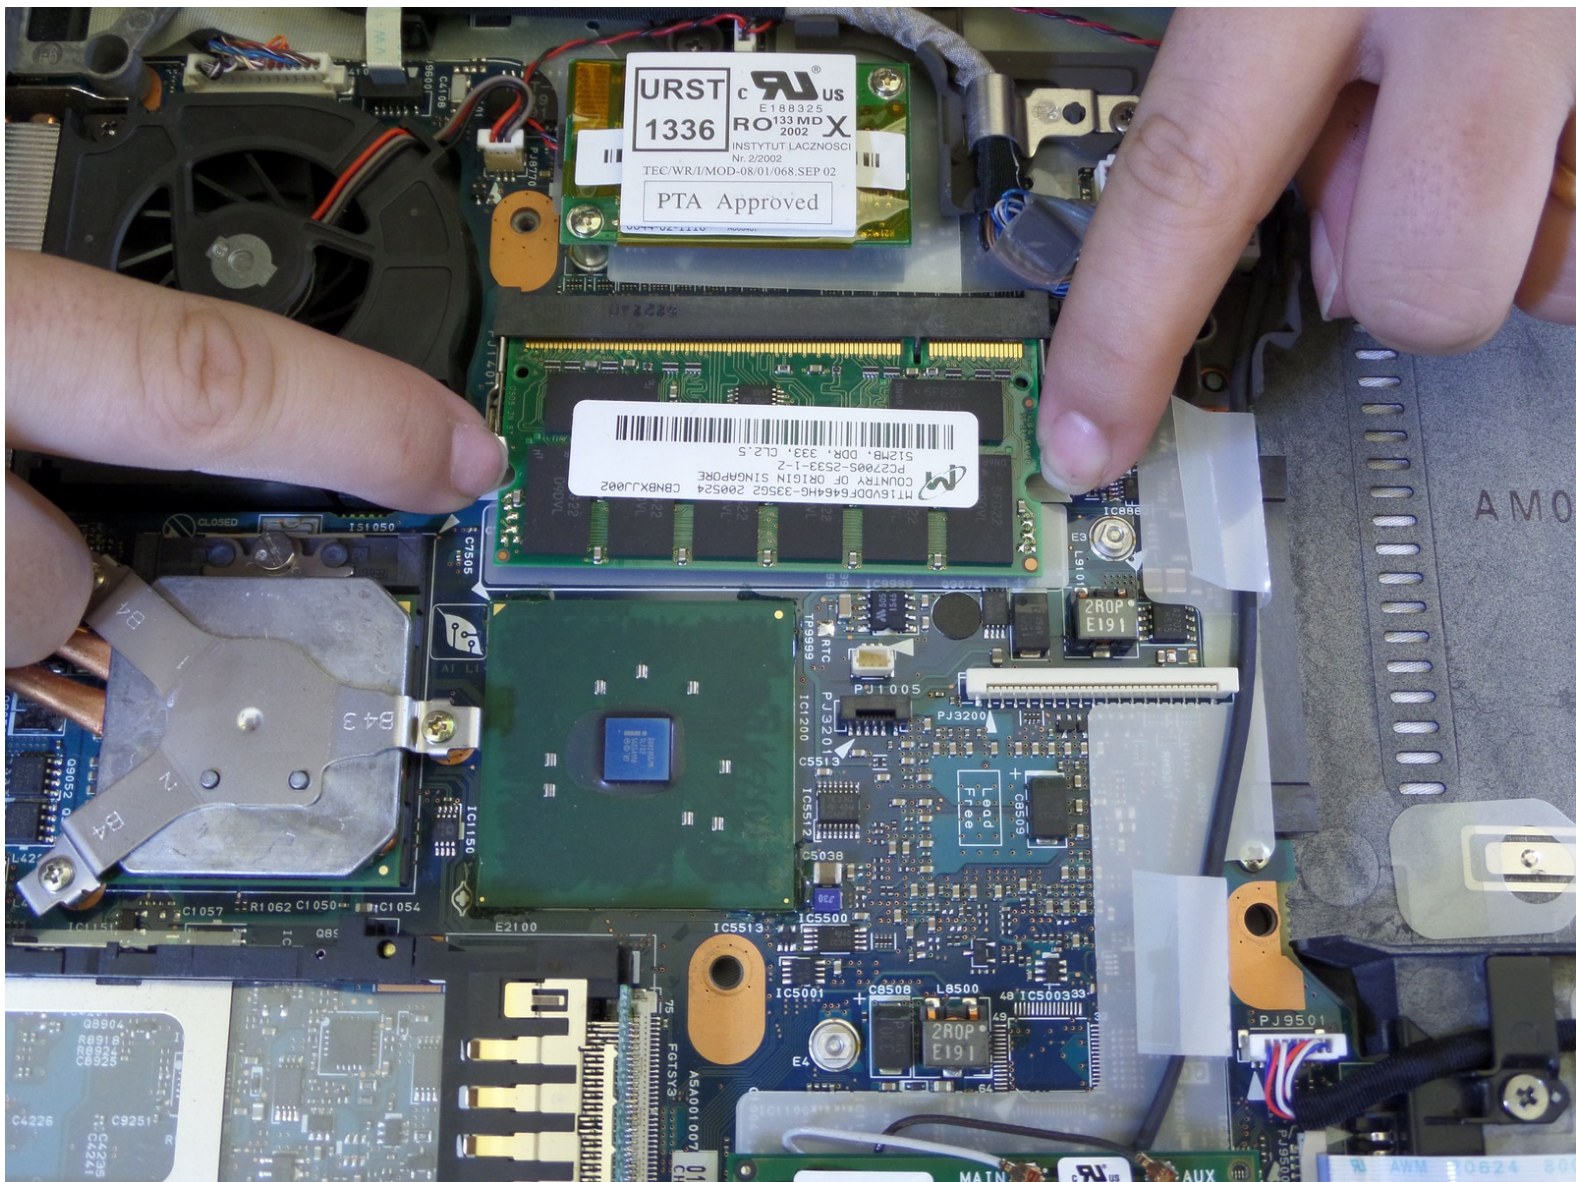



## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-



## Step 1 — Battery



- Flip the laptop upside down so the back compartment is facing up.
- Place left thumb on the battery lock tab.
- Place right thumb on the battery release latch.

## Step 2




- Slide both tabs outward at the same time to release battery pack.

## Step 3



- Pull out the battery after it has popped out and set aside.
- ❗ The battery and the battery cover are in one piece

## Step 4 — RAM

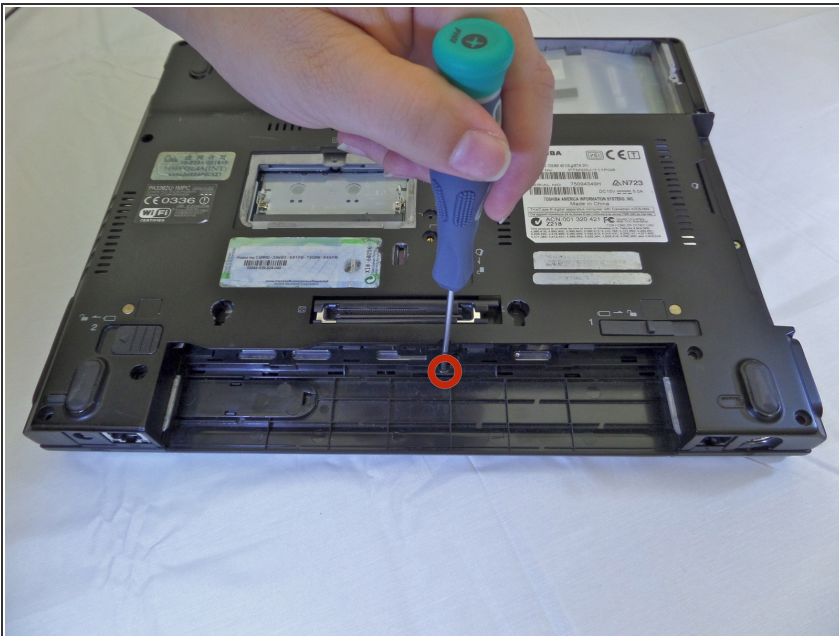

- Use a #00 phillips head screwdriver to remove the 8mm screw for the keyboard strip located under the battery.




## Step 5



- Turn the device over and open it up to the display and keyboard.
- Gently lift a corner of the keyboard strip until it pops out of its position.

## Step 6

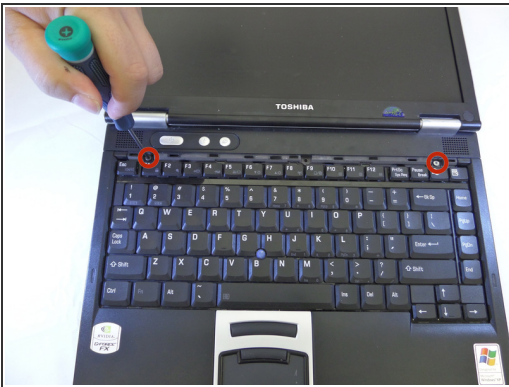



- Using a #00 phillips head screwdriver, remove the two 4mm screws found underneath the keyboard strip.

## Step 7



- Pop the keyboard up gently and let it rest on top of the touch pad
- ❗ The keyboard is attached underneath by a thin film. Do not rip the keyboard off. Gently lay it down without ripping the film.

## Step 8

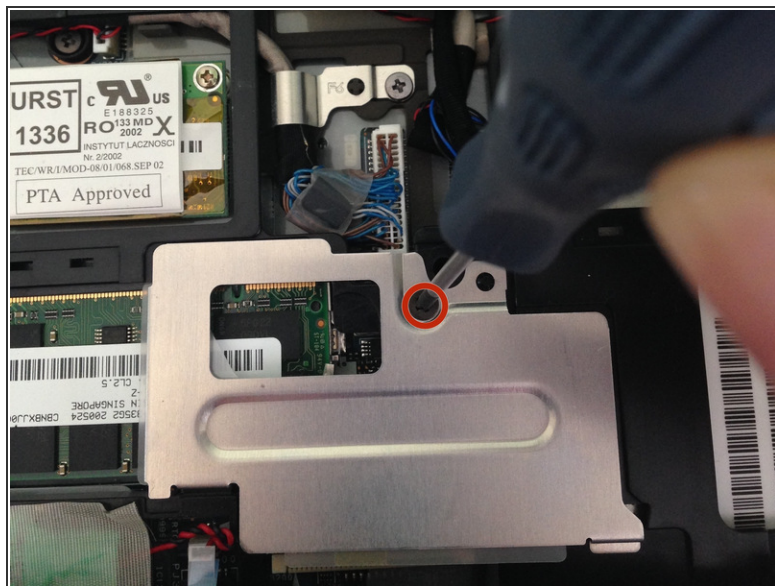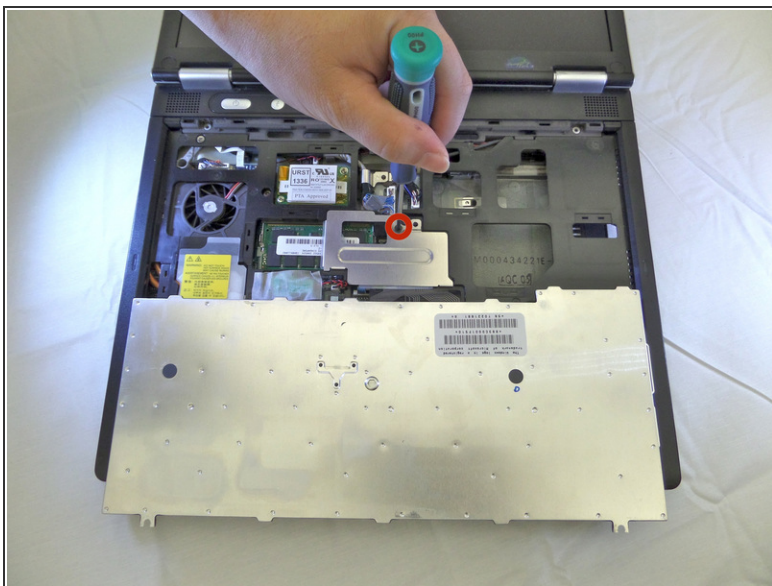

- Using a #00 Philips head screwdriver, remove the 6mm screw holding the metal plate down.




## Step 9



- Gently remove the keyboard connector film from the motherboard with your fingers by lifting upwards.
- Set aside the keyboard.

## Step 10

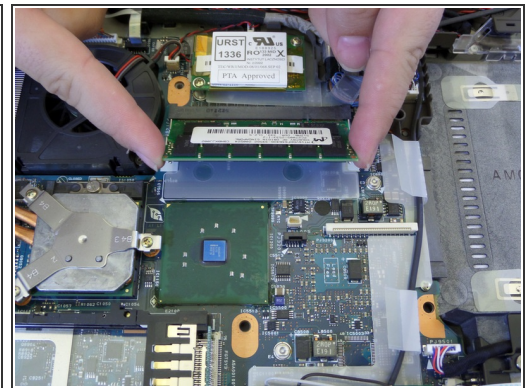

- Pull back the metal tabs holding down your RAM card at the same time.
- Grab the module by the sides with two index fingers and pull upwards after it has popped up.

To reassemble your device, follow these instructions in reverse order.

